

ST Issue 3



Cert. No. LRQ 0963008 ISO 9001

Steel **Inverted Bucket Steam Traps**

spirax sarco **SCA Series**

Description

The Spirax Sarco SCA series is a maintainable carbon steel inverted bucket steam trap with in-line connections. They are suitable for a wide range of pressures and incorporate an integral strainer.

Sizes and pipe connections


1/2", 3/4" and 1" screwed BSP or NPT. DN15, DN20 and DN25 socket weld ends (ANSI B 16.11), flanged PN40, ANSI 150 and ANSI 300.

 
Limiting conditions (ISO 6552)

Maximum operating conditions depend on the orifice size.

Body design conditions	ANSI/ASME 300 (PN50)
PMA - Maximum allowable pressure	51 bar g
TMA - Maximum allowable temperature	400°C
Designed for a maximum cold hydraulic	test pressure of 78 bar g

Operating range

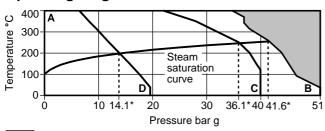



- * PMO Maximum operating pressure recommended.
- A B Flanged ANSI 300, screwed and socket weldA C Flanged BS 4504 PN40 (ISO 7005.1)
- A D Flanged ANSI 150


Differential pressure limitations

	ΔPMX - Maximum differential pressure bar							
Size	3	5	11 15		30 40			
DN15 ½"	SCA3	SCA5	SCA11	SCA15	SCA30	SCA40		
DN20 ¾"	SCA3	SCA5	SCA11	SCA15	SCA30	SCA40		
DN25 1"	SCA3	SCA5	SCA11	SCA15	SCA30	SCA40		

The SCA15, SCA30 and SCA40 are available as standard and the SCA3, SCA5 and SCA11 to special request.

Note: The pressure limit on the flange specified should be greater than the pressure limit of the internal mechanism. The table below offers guidance.

Flange	Pressure (at saturation)	Mechanism available		
ANSI 150	14.1 bar g	3, 5, 11 (15 limited to 14.1 bar g)		
ANSI 300	41.6 bar g	all versions		
PN40	36.1 bar g	3, 5, 11, 15, 30 (40 limited to 36.1 bar g)		

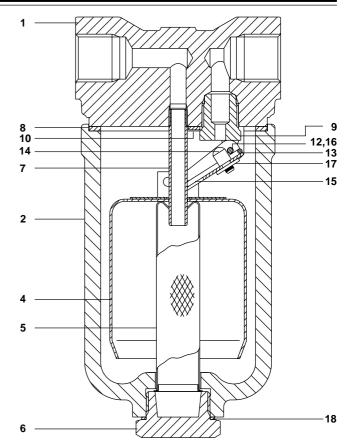

Materials

	No	Part	Material					
	1	Body	Carbon steel	ASTM A105				
	2	Cover	Carbon steel	A216 WCB				
*	3	Cover bolts	Steel	ASTM A193 Gr. B7				
	4	Bucket	Stainless steel	AISI 304-2B				
	5	Screen	Stainless steel	AISI 304				
	6	Strainer cap	Stainless steel	AISI 416				
	7	Inlet tube	Stainless steel	AISI 304				
	8	Cover gasket	Reinforced exfo	liated graphite				
	9	Valve seat	Stainless steel	AISI 440C				
	10	Valve guide plate	Stainless steel	AISI 304-2B				
*	11	Valve guide plate screws	Stainless steel	BS 6105 CI A2-70				
	12	Hinge pin	Stainless steel	AISI 304				
	13	Valve lever	Stainless steel	AISI 304-2B				
	14	Valve head	Stainless steel	AISI 420				
	15	Spring pin	Stainless steel	AISI 304				
	16	Washer	Stainless steel	AISI 304				
	17	Starlock washer	Stainless steel	AISI 301				
	18	'S' type gasket	Stainless steel	AISI 304				
	Note: Nove O and 44 and Shortest d							


^{*} Note: Items 3 and 11 not illustrated.

Certification


The product is available with material certification to EN 10204 3.1.B as standard. Certification must be specified at the time of order.

Dimensions / weights (approximate) in mm and kg

Size	Screwed SW A	PN40 A1	ANSI 150 A1	ANSI 300 A1	В	Withd dista		Screwed SW	We i PN40	ght ANSI 150	ANSI 300
DN15 ½"	90	150	150	150	167	100	110	3.0	4.7	4.6	5.0
DN20 ¾"	90	150	150	150	167	100	110	3.0	5.3	5.0	5.8
DN25 1"	165	160	160	160	167	100	110	3.5	6.0	5.7	6.5

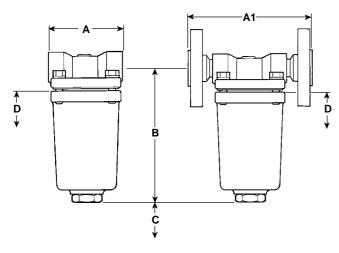

_

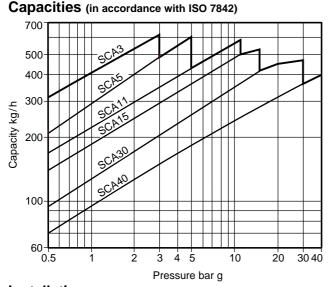

Installation

The trap must be installed with the body upright so that the bucket is rising and falling vertically. The inlet and outlet connections should be in a horizontal plane, with the trap installed below the drain point so that a water seal can be maintained around the open end of the bucket.

Maintenance

Before undertaking any maintenance on the inverted bucket steam trap it must be isolated from both supply line and return line and any pressure allowed to safely normalise to atmosphere. The trap should then be allowed to cool. It is recommended that new gaskets are used whenever maintenance is undertaken.

The cover gasket contains a thin stainless steel support ring which may cause physical injury if it is not handled and disposed of carefully.

How to fit valve and seat assembly

Isolate the inverted bucket steam trap, remove body by undoing cover bolts. Remove complete bucket assembly by undoing the two screws. Remove valve seat. Screw in new valve seat to torque figures shown, using a little jointing paste on the threads and making sure that joint faces are clean. Fix new bucket assembly in position by using new screws which are supplied, centralise valve to the orifice and tighten screws to torque figures shown. Using new gaskets, refit body to torque figures shown.

How to order

Example: 1 off Spirax Sarco DN20 SCA15 inverted bucket steam trap with steel body, and flanged to PN40.

Spare parts

The spare parts that are available are detailed below.

Available spare


Internal set (state pressure range)	4, 8, 9, 10, 11 (2 off)*, 12, 13, 14, 15, 16 (2 off), 17
Strainer set	5, 18
Cover and strainer gasket (pack	et of three) 8. 18

* Note: Item 11 (valve guide plate screws) are not shown.

How to order spares

Always order spare parts by using the description given in the column headed 'Available spare' and state the size, model number and pressure rating of the trap.

Example: 1 - Internal set for a Spirax Sarco DN20 SCA15 inverted bucket steam trap.

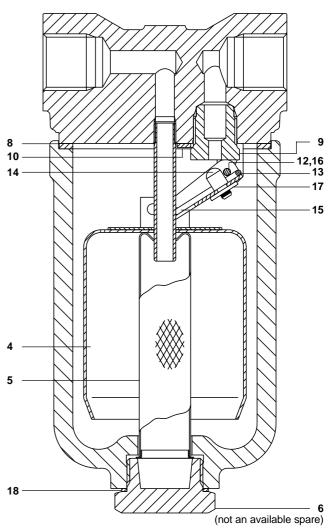

Recommended tightening torques

Item No	Part		or	N m
*3	Cover bolts	14	M10	40 - 45
6	Strainer cap	5	M28	170 - 190
9	Valve seat	17	M16	35 - 40
*11	Valve guide plate screws	Posidrive	M4 x 6	2.5 - 3.0

*Note: Items 3 and 11 are not illustrated.

