



Setup Video 3 Setting the Temperature Levels

1

The first step in the program setup process is to set the desired temperatures for the 4 available heating levels.



2

When the temperatures for a heating level are being adjusted the **SETTING INDICATOR** symbol will appear in the bottom left hand corner of the display.



Setting Indicator



3

To begin, wake up the stat by tapping any button.

Press < or >

To select the **SUNNY LEVEL** icon



4

To set the **SUNNY HIGH TEMPERATURE** level

Press ▲ or ▼

Until the desired temperature is shown on the display

Then press ✓



5

In this example **SUNNY LEVEL** has now been set to **22°C**



6

Next

Press < or >

To select the **CLOUDY LEVEL** icon





Setup Video 3 Setting the Temperature Levels

7

To set the **CLOUDY MID TEMPERATURE** level

Press or

Until the desired temperature is shown on the display

Then press



8

In this example **CLOUDY LEVEL** has now been set to **20°C**



9

Next

Press or

To select the **MOON LEVEL** icon



10

To set the **MOON LOW TEMPERATURE** level

Press or

Until the desired temperature is shown on the display

Then press



11

In this example **MOON LEVEL** has now been set to **16°C**



12

Next

Press or

To select the **FROST LEVEL** icon





Setup Video 3 Setting the Temperature Levels

13

To set the
FROST PROTECTION
temperature level

Press or

Until the desired temperature
is shown on the display.

Then press



14

In this example
FROST MODE has
now been set to **10°C**

The minimum temperature
setting for **FROST LEVEL** is **5°C**,
and the maximum is **17°C**.



15

After **FROST LEVEL** has
been set

Press or

to select the
AUTO MODE icon



To complete the process.



16

The heating levels will
now function as set
by the user.

After any level is set
the display will revert
to the current room
temperature.

