
SOLD TO :	P.O. # :	
ULTIMATE CUSTOMER : (IF AVAILABLE)	P.O. # :	
AMETEK NO. :	DRW. TO :	CUST. SPEC. NO. :
ORDER ITEM NO. :	QUANTITY :	FILL FLUID :

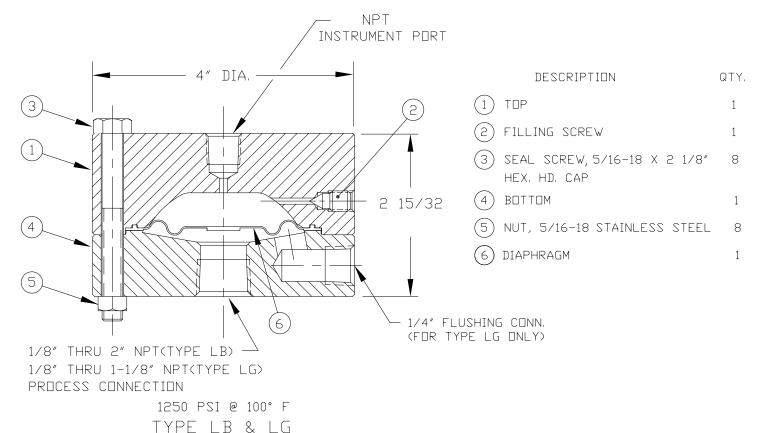

INSTRUMENT DESCRIPTION

INSTALLATION: - CONNECT ASSEMBLED SEAL TO STANDARD MALE NPT PIPE THREAD.

OPERATION: - WHEN CLEANING IS REQUIRED, REMOVE FROM PIPE THREAD

AND CLEAN AS A UNIT.

CAUTION: - DO NOT LOOSEN SEAL SCREW, PART #3, OR INSTRUMENT CONNECTION.

DO NOT PERMIT ANY SHARP OBJECTS TO COME INTO CONTACT WITH THE DIAPHRAGM. THE DIAPHRAGM IS MADE OF ELASTOMER AND CAN BE PUNCTURED. ANY OF THESE CAN RESULT IN LOSS OF LIQUID

FILL AND RECALIBRATION & REPLACEMENT OF DIAPHRAGM WILL BE

NECESSARY.

DRAWING CERTIFIED CORRECT,

DATE :

AMETEK



AMETEK

TEST AND CALIBRATION INSTRUMENTS DIVISION LARGO , FLORIDA

CODE IDENT. NO.	REVISION	А	В	С	D		AMETEK DIAPHRAGM SEAL TYPE LB DATA AND INSTRUCTION SHEET DRAWING NO.: SK-5274
92456	DATE	4/8/76	4/3/78	6/28/79	5/25/95		